


VILLAGE OF RUIDOSO
PERMITS & INSPECTIONS
A Division of the Planning Department

New Construction Window and Flashing Detail
Use 8" Wide Flashing

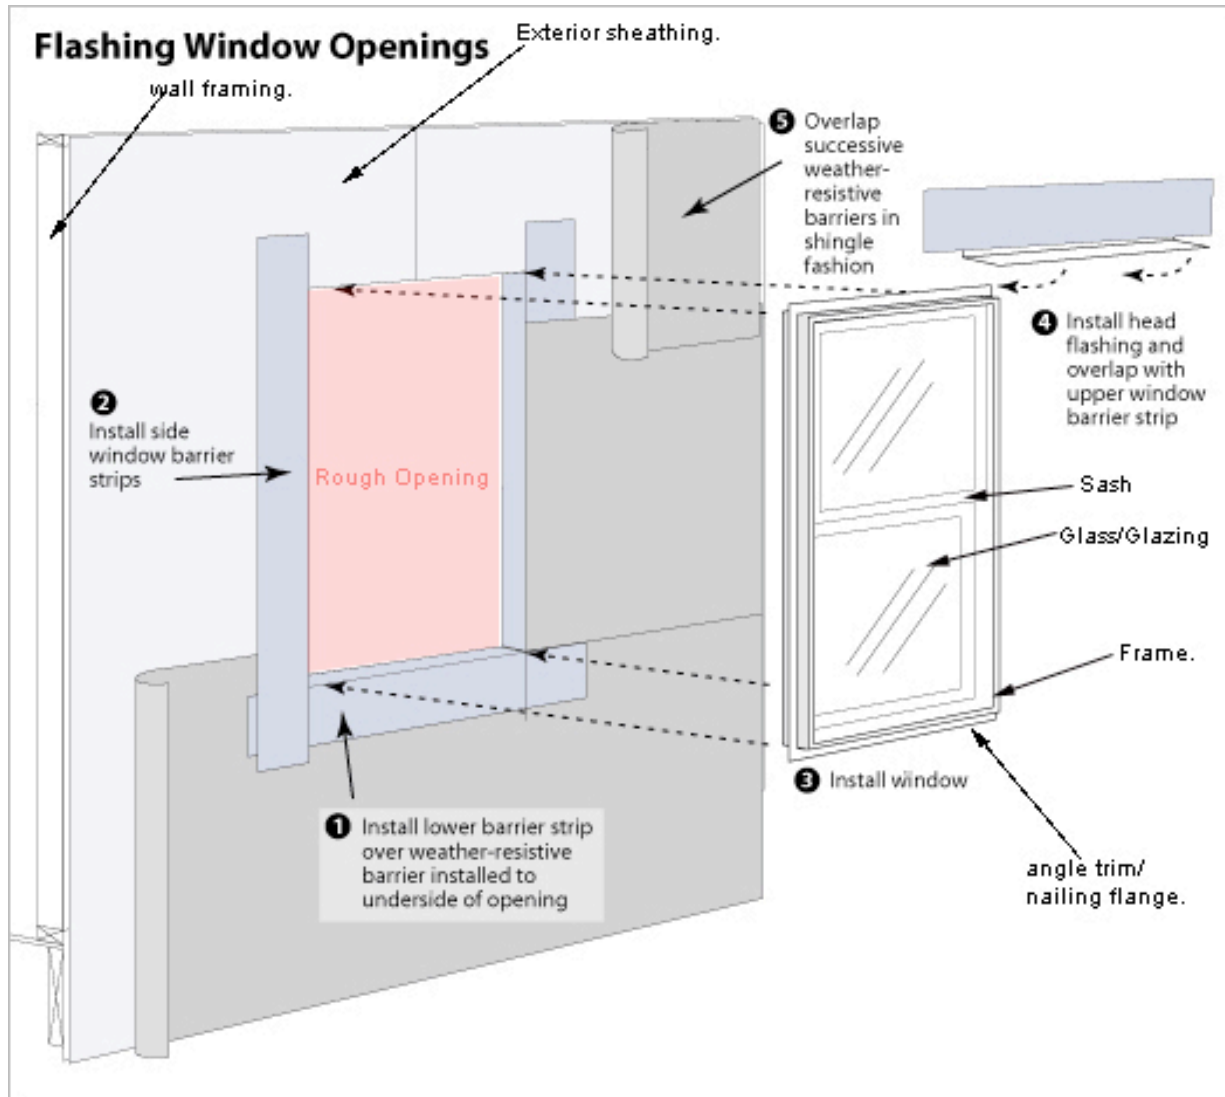

Install caulking between back of window flange and window flashing or use sealant tape per the manufactures installation instructions.